


# Front Desk Sign INSTALLATION INSTRUCTIONS

01 | PLACE TEMPLATE

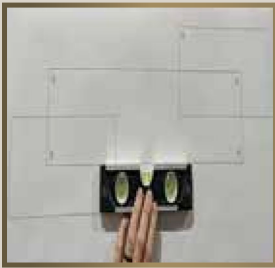

## STEP ONE

### PLACE TEMPLATE

Level paper template on wall, then tape into place with painters tape.

06 | PROGRESS



## STEP SIX

### PROGRESS

Your progress should look like this.

02 | DRILL HOLES



## STEP TWO

### DRILL HOLES

Using a 1/4" drill bit, drill holes in center of targets.

07 | SMALL ACRYLIC



## STEP SEVEN

### SMALL ACRYLIC

Install threaded studs into standoff bases. Place smaller acrylic pieces in places shown. Use spacer and cap as shown

03 | PLACE ANCHORS




## STEP THREE

### PLACE ANCHORS

Push supplied anchors into holes

08 | PROGRESS

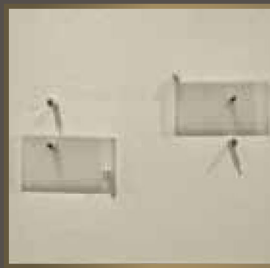

## STEP EIGHT

### PROGRESS

Your progress should look like this.

04 | SCREW IN STUDS



## STEP FOUR

### SCREW IN STUDS

Screw in wall studs.

09 | LOGO PIECE



## STEP NINE

### LOGO PIECE

Now place front piece of acrylic. Attach final standoff caps. Wipe sign and area around it with damp rag.

05 | STANDOFF BASE



## STEP FIVE

### STANDOFF BASE

Screw on Standoff bases. The longer bases are mounted on the top left and bottom right.

10 | ENJOY



## STEP TEN

### ENJOY

Enjoy.